

FIAT 500 GAS VEHICLES (LPG)




Congratulations! You have rented a gas vehicle (LPG) and have numerous advantages. In addition to collaborating with the environment and enjoying more freedom, **you will save 40% on your fuel.**

At Goldcar we want to make driving easy. In this book you will find everything you need to know about gas vehicles, and their use, so you don't have to worry about anything and can just enjoy the Goldcar experience.

Remember on the return of your vehicle, NOTHING will be charged for the gas in the tank at the time nor do we give a refund for any gas remaining in the tank.

1. COLLECTING THE GAS VEHICLE

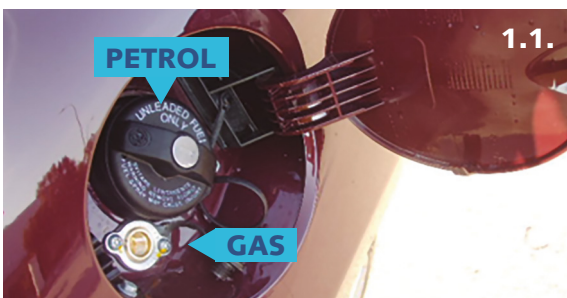

1.1. The first thing to know about gas vehicles is they have two tanks fuel (with two refuelling openings): one petrol and one gas. (On the right you can see the petrol one and on the left the gas).



1.2. The gas tank must always have some fuel because if it is empty it will not start (it will not start if you have only gas).

1.3. Below the gear lever, you will see a button indicating whether the vehicle is in "gas mode" or "petrol mode". To change from one mode to the other, simply press the button on the side you prefer. The "G" for gas and the icon for petrol. The corresponding LED light will come on.

1.4. You receive the vehicle with a full tank of petrol but in the case of the gas tank, you will have what was left in the tank by the previous customer.



1.5. Using the on-board computer you will see how much petrol and gas the vehicle has.

1.6. To see the amount of gas the vehicle has, you use the same button used to change from gas to petrol. In the image, the gas button so that the vehicle can drive using gas. You can see that the green LED is on. The amount of fuel is shown by the orange leds on top of the button. As you can see in the picture, there is only one led on, so the vehicle has very little gas.




1.7. You will know as a sound is emitted and the LED on the petrol button will turn on.

1.8. At the time of delivery of the vehicle we will also supply two nozzles (inside a blue bag) needed to refuel gas.

1.9. You can use either of the two nozzles, depending on the gas output the gas supplier has for refuelling. You will this at the pump. You just insert it into the opening.



1.10. Once you have inserted the nozzle into the opening, it will be like this:

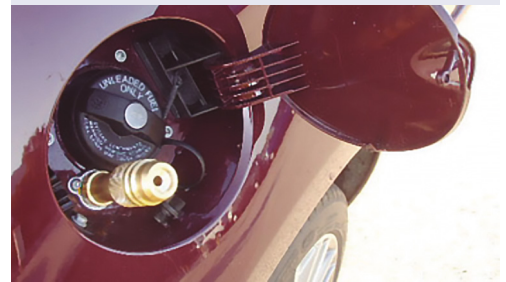

2. DRIVING

2.1. WHAT IS THE RANGE OF THE VEHICLE?

One of the advantages of gas vehicles is its range. On average, you can go about 500 km using only the Autogas LPG tank.



500 KM
(LPG)

2.2. WHERE DO I REFUEL?

If you need to fill the fuel tank, you can go to any petrol station as you would do with any other vehicle. If you want to fill the gas tank, you must go to gas stations that offer the option of Autogas LPG.

You can check the stations:

www.aoglp.com/que-es-autogas/donde-reposta

3. RETURNS IN OFFICE GOLDCAR

3.1. At the end of the hire, you must return the nozzles in the bag with the car keys at the office. Otherwise, the corresponding amount will be charged for this accessory.

3.2. The remainder of the refund procedure will be the same as any other vehicle: to return the keys and the nozzles, a member of staff will conduct a check on the condition of the vehicle.

We hope you enjoyed your gas vehicle hire with Goldcar and repeat the experience soon.

Remember that our Roadside Assistance service is available 24 hours. at 902 105 276

