

GOLDCAR

OPEL CORSA GAS VEHICLES (LPG)



Congratulations! You have rented a gas vehicle (LPG) and have numerous advantages. In addition to collaborating with the environment and enjoying more freedom, **you will save 40% on your fuel.**


At Goldcar we want to make driving easy. In this book you will find everything you need to know about gas vehicles, and their use, so you don't have to worry about anything and can just enjoy the Goldcar experience.

Remember on the return of your vehicle, nothing NOTHING will be charged for the gas in the tank at the time nor do we give a refund for any gas remaining in the tank.

1. COLLECTING THE GAS VEHICLE

1.1. The first thing to know about gas vehicles is they have two tanks petrolFUELFuel (with two refuelling openings): one petrol and one gas. (On the right you can see the petrol one and on the left the gas).

1.2. The gas tank must always have some fuel because if it is empty it will not start (it will not start if you have only gas).

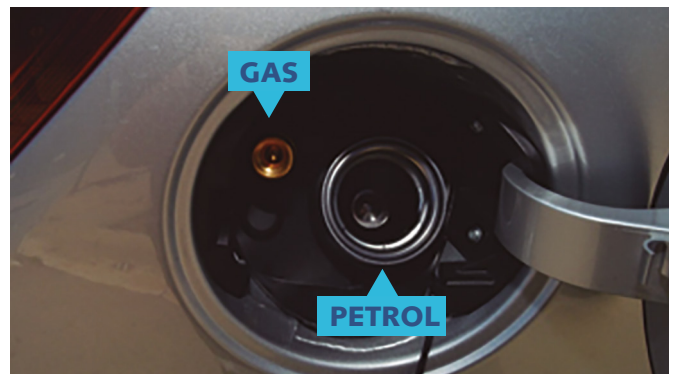

1.3. These vehicles use petrol and gas by default.

When starting the vehicle it will automatically turn on the gas option. You'll see on the dashboard there is a Led "LGP" button which will be on.

If you want to use only petrol option, you can change by pressing on the gas "LPG" button and, after a slight flicker, AFTER A SLIGHT FLICKER, the red LED will turn off and the gas option will be off too.

1.4. You receive the vehicle with a full tank of petrol but in the case of the gas tank, you will have what was left in the tank by the previous customer.

1.5. Using the on-board computer you will see how much petrol and gas the vehicle has. The fuel gauge is the same for both petrol and gas (LPG). When starting the vehicle it indicates the level of gas (LPG), as the gas option is activated by default. Each time the vehicle is started, to see the petrol level you will need to disconnect the option using the LPG button on the dashboard, the indicator shows the fuel level.

1.6. We can see the level of both fuels from the on board computer (as shown in the picture below) Do not worry if the vehicle runs out of gas because it will automatically switch to the petrol option. You will see that the LED on the "LPG" button will turn off.




1.7. If you have chosen the Opel Corsa, at the time of delivery of the vehicle we will also supply two nozzles (inside a blue bag) needed to refuel gas.



1.8. You can use either of the 2 nozzles. Just put it in the opening.



1.9. Once you have they got the nozzles in the opening, you do the following:

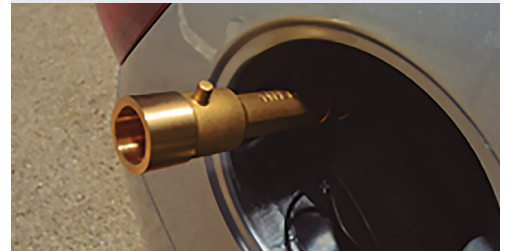

2. DRIVING

2.1. WHAT IS THE RANGE OF THE VEHICLE?

One of the advantages of gas vehicles is its range. On average, you can go about 500 km using only the Autogas LPG tank.



500 KM
(LGP)

2.2. WHERE DO I REFUEL?

If you need to fill the (tEn) gas tank, you can go to any gas station as you would do with any other vehicle. If you want to fill the gas tank, you must go to gas stations that offer the option of Autogas LPG.

You can check the stations:

www.aoglp.com/que-es-autogas/donde-reposta

3. RETURNS IN OFFICE GOLDCAR

3.1. At the end of the hire, you must return the nozzles in the bag with the car keys at the office. Otherwise, the corresponding amount will be charged for this accessory.

3.2. The remainder of the refund procedure will be the same as any other vehicle: to return the keys and the nozzles, a member of staff will conduct a check on the condition of the vehicle.

We hope you enjoyed your gas vehicle hire with Goldcar and repeat the experience soon.

Remember that our Roadside Assistance service is available 24 hours at 902 105 276

